



## Winemex 7



# IMPORTANT SAFETY INSTRUCTIONS

**PLEASE READ THE FOLLOWING SAFETY WARNINGS AND THE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE AND KEEP FOR FUTURE REFERENCE.**

## Warnings



- Warning; Risk of fire / flammable materials
- This appliance is intended to be used in household and similar applications such as
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses and by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - catering and similar non-retail applications.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.  
Cleaning and user maintenance shall not be made by children without supervision.

# TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	3
OVERVIEW .....	6
BEFORE INSTALLING THE APPLIANCE .....	6
INSTALLING THE APPLIANCE .....	7
AMBIENT TEMPERATURE.....	7
MOVING YOUR APPLIANCE.....	7
BEFORE FIRST USE .....	7
OPERATION .....	8
AUTOMATIC DEFROSTING .....	10
OPERATING NOISES .....	10
TIPS FOR SAVING ENERGY.....	10
CLEANING AND MAINTENANCE .....	10
TROUBLESHOOTING .....	11
SPECIFICATIONS .....	11
PRODUCT INFORMATION SHEET .....	12
REPAIR AND SPARE PARTS SERVICE.....	12
DISPOSAL .....	14

- The appliance shall not be exposed to rain.
- **For installation, servicing**  
Appliance should be placed on a horizontal surface and keep the ventilation freely. Don't try to replace or repair any components by yourself, ask the service agency for help if necessary.
- **For handling**  
Always handle the appliance to avoid any damage.
- **For disposal of the appliance**
- To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle the appliance responsibly to promote the sustainable reuse of material resources, the refrigerants and the flammable insulation blowing gases. The disposal should only be done through public collection points; contact the waste treatment centre nearest your home for more details on the correct procedures for disposal.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the

food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- For the details concerning the method of cleaning, please see section “CLEANING AND MAINTENANCE” on page 23.
- Regarding the instructions for the method of fixing and the correct dimensions, refer to the section “INSTALLATION”.
- The plug must be remained easily accessible after installation of the appliance.

## **Safety Information**

 
- Use the appliance only for its intended purpose as described in this manual.
- Do not place heavy objects on the top of the appliance.
- Turn off and unplug the appliance from the mains socket when not in use or before cleaning.
- Do not stand or support yourself on the base or doors, etc.

- Always carry, store and handle the appliance in a vertical position.
- Do not store food in the appliance as the interior temperature may not be cool enough to prevent spoilage.

## Dispose of your old appliance

The appliance contains refrigerant and gases in the insulation. Refrigerant and blowing gases must be disposed of professionally. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

### OVERVIEW

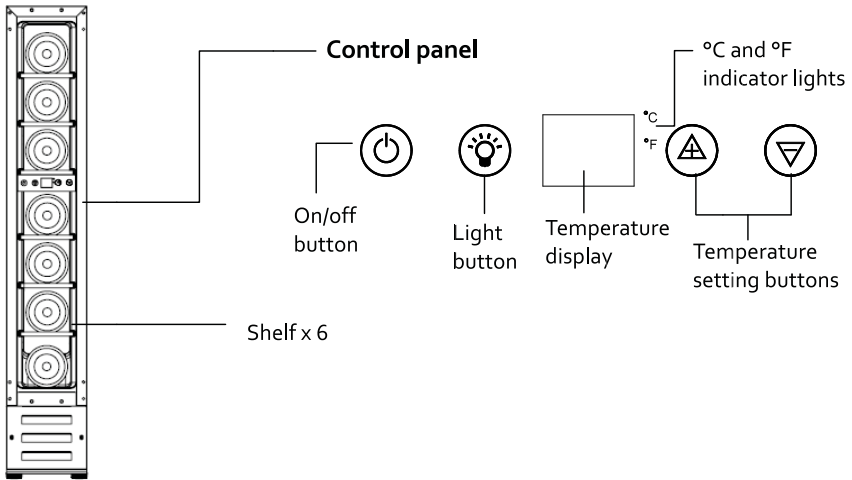

### BEFORE INSTALLING THE APPLIANCE

 
Before connecting your appliance to the power supply, check that the voltage stated on the rating label of your appliance corresponds to the voltage in your home. A different voltage could damage the appliance.

The plug is the only way to unplug the appliance and should therefore be accessible at all times. To turn off main power to the appliance, detach the plug from the outlet. Do not immerse the appliance, the power cord or the plug in water or other liquids.

The appliance must be grounded. The manufacturer is not responsible for damages that may occur as a result of usage without grounding.

## INSTALLING THE APPLIANCE

Your wine cooler is used as a built-in appliance.

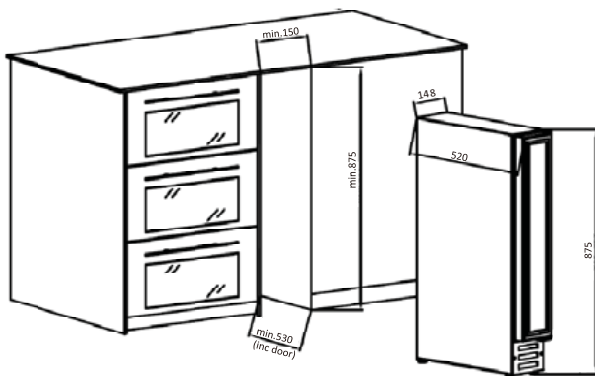


If this appliance is built in a counter, please follow the dimensions (unit : mm).

To ensure adequate ventilation for the appliance, do not block the air vents on the bottom of the appliance.

For uneven surfaces, front feet can be aligned.

### Installing the door handle

 1. Remove the door gasket on the side. There will be 2 designated holes for the handle to be installed.
2. Position the handle on the outside of the door, aligning the screw holes of the handle with the holes on the door.
3. Tighten the screws to fix the handle to the door.  
**DO NOT over tighten the screws.**
4. Replace the door gasket.

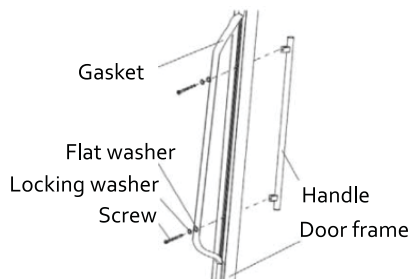

### AMBIENT TEMPERATURE

This appliance is designed to operate in ambient temperature between 10°C and 38°C. If these temperatures are exceeded, i.e. colder or warmer, the appliance will not operate correctly.

### MOVING YOUR APPLIANCE

- Make sure that the appliance is unplugged from the mains socket. Remove all bottles and shelves to avoid any shock.
- Always move the appliance vertically.
- After moving, wait for 30 minutes before plugging in the appliance.

Your appliance uses isobutane (R600a) as a refrigerant. Although R600a is an environmentally friendly and natural gas, it is explosive. Therefore you should be careful during shipment and installation to prevent your appliance's cooler elements from being damaged. In the event of a leak caused by damage to the cooler elements, move your appliance from open flame or heat sources and ventilate the room where the appliance is located for a few minutes.

### BEFORE FIRST USE

Remove all packaging.

Clean the interior surface with lukewarm water using a soft cloth. Dry thoroughly.

## OPERATION





Ensure that the appliance is placed on a flat and stable surface.


Plug the appliance into the mains socket. The display will show the current actual temperature of the internal cabinet.

Allow the appliance to cool down for 2-3 hours before placing wine bottles in the appliance.


### Selecting the temperature

The temperature can be set from 5°C to 22°C.


1. Repeatedly press  /  to select the required temperature.
2. The display will return to the current actual temperature of the internal cabinet.
  - The current actual temperature will vary depending on the quality of bottles stored and how often the door is opened.
  - The temperature displayed will flash when it is 4°C higher than the set temperature.
  - To view the set temperature, press  / , the set temperature will flash on the display for approximately 3 seconds and then return to the current actual temperature of internal cabinet.
3. The temperature display can be switched between Celsius (°C) and Fahrenheit (°F) by pressing and

holding . The corresponding indicator light °C or °F will illuminate.

### Turning on/off the appliance

Press and hold  for approximately 3 seconds to turn on or off the wine cooler.

### Interior light

Press  to turn the interior light on or off.

The Wine Cooler is recommended to be designed at 12°C.

The shelves are placed in factory mode that results in the most efficient use of energy for the refrigerating appliances.

 
**Note:** Setting the temperature too high can cause the wine to spoil, and setting the temperature too low can waste electricity.

### Tips for storing wine

Store wine in sealed bottles.

Do not overload the appliance. The maximum number of bottles that can be stored is 7, depending on the size of bottles.

To achieve the maximum capacity of the appliance, the bottles should be laid out as shown.

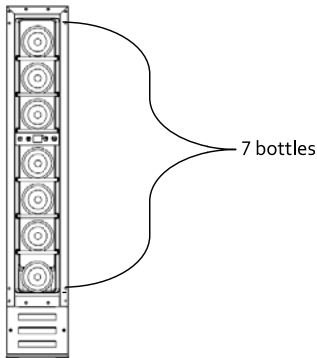





## REVERSING THE DOOR OF YOUR WINE COOLER



 Any parts that you remove from the appliance whilst reversing the door, should be retained for later use.

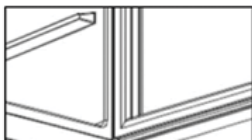


 
o Open the glass door and remove the two screws, under the right bottom corner of the glass door, that are used to hold the right lower hinge to the door shaft assembly.

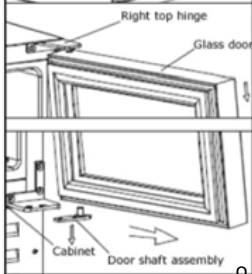

o Be careful to support the glass door with both hands to prevent it dropping after removing the screws.

o Pull down to remove the glass door and place it on a padded surface to prevent it from being scratched.

  o Remove the right top hinge and right lower hinge.

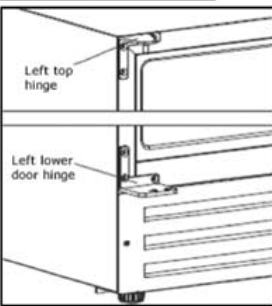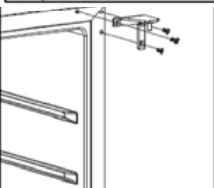

o Take the left top hinge and left lower hinge from the plastic bag that contained this manual then install them in the designated positions on the left side of the cabinet.

o Turn the glass door around 180° and reinstall it.

**IMPORTANT:** Check that the door opens and shuts correctly, without fouling, after you have completed the door reversal process.



*After the door has been reversed, you should check the door seal of the wine cooler. The seal should not be creased or crushed; otherwise there will be a gap between it and the inside of the door.*

The seal must adhere properly all the way around the door.

If the seal is not adhering to the cabinet properly, then you should either:

- a) Use a warm damp cloth and manipulate the seal until it does adhere to the cabinet properly, all the way around the door.  
Or
- b) Use a hair dryer on its lowest heat setting and lightly heat the areas of the door seal that are not adhering correctly. The heat will make the seal more pliable and this will allow you to manipulate the seal into the correct position.

***IMPORTANT: WHEN YOU HAVE REVERSED THE DOOR OF THE APPLIANCE, IF YOU HAVE PLACED THE APPLIANCE ON ITS BACK, YOU MUST WAIT FOR 8 HOURS BEFORE SWITCHING THE APPLIANCE BACK ON.***

## **AUTOMATIC DEFROSTING**

Ice build-up on the inner back wall during compressor operation will defrost automatically when the compressor has cycled off.

Defrost water will drain out through the drain outlet into a drain pan from where it will evaporate.

## **OPERATING NOISES**

### **Normal noises**

- Motors are running.
- Refrigerant is flowing through the tubing.

## **TIPS FOR SAVING ENERGY**

For the most energy efficient use of your appliance :

- Ensure your appliance has adequate ventilation as recommended in the installation instructions.
- Keep door openings to a minimum.
- Open the appliance as briefly as possible.
- Ensure that the door is always closed properly.

## **CLEANING AND MAINTENANCE**

- Unplug the appliance from the mains socket before cleaning.
- Remove all bottles and shelves from the appliance.
- Clean the appliance with a soft cloth, warm water and detergent. Clean shelves with a slightly damp cloth. Dry thoroughly.
- Do not use any abrasive or cleaning agent.

The interior LED lights in the appliance cannot be replaced by the user. If the LED lights stop working, please contact the local authorised service agent.

## TROUBLESHOOTING

If there is a problem with your appliance, please check the following points before contacting customer service.

<b>Problem</b>	<b>Possible Cause</b>	<b>Possible Solution</b>
The appliance is not working.	The appliance is not plugged in the mains socket.	Check that the appliance is properly plugged in the mains socket.
The appliance is noisy during operation.	The appliance is not level.	Adjust the front feet to level the appliance.
The appliance is not cool enough.	Temperature set incorrectly	Check temperature and reset if necessary.
	External environment may require colder temperature.	
	The door is opened too often.	Only open the door when necessary.
	Door seal is worn.	Contact a local authorised service agent.

## SPECIFICATIONS

<b>Rated voltage and frequency</b>	220-240V~ 50Hz
<b>Curent</b>	0,4A
<b>Lamp power</b>	<1W
<b>Insulation blowing gas</b>	Cyclopentane
<b>Protection type</b>	I
<b>Refigerant</b>	R600a/ 20g
<b>Net weight</b>	21kg
<b>Bottle capacity</b>	7

## PRODUCT INFORMATION SHEET

Supplier's name or trade mark: Thermex Scandinavia A/S | Thermex

Supplier's address: Farøvej 30, 9800 Hjørring

Model identifier: Winemex 7

Type of refrigerating appliance:

Low-noise appliance:	no	Design type:	Build-in
Wine storage appliance:	yes	Other refrigerating appliance:	no

General product parameters:

Parameter		Value	Parameter	Value
Overall dimensions (millimeter)	Height	875	Total volume (dm <sup>3</sup> or l)	20
	Width	150		
	Depth	520		
EEI		139	Energy efficiency class	G
Airborne acoustical noise emissions (dB(A) re 1 pW)		41	Airborne acoustical noise emission class	C
Annual energy consumption (kWh/a)		108,04	Climate class:	Extended temperate/ temperate/subtropical
Minimum ambient temperature (°C), for which the refrigerating appliance is suitable		16	Maximum ambient temperature (°C), for which the refrigerating appliance is suitable	38
Winter setting		no		

Compartment Parameters:

Compartment type		Compartment parameters and values			
		Compartment Volume (dm <sup>3</sup> or l)	Recommended temperature setting for optimised food storage (°C)	Freezing capacity (kg/24 h)	Defrosting type (auto-defrost = A, manual defrost = M)
Pantry	no	-	-	-	-
Wine storage	yes	20	12	-	A
Cellar	no	-	-	-	-
Fresh food	no	-	-	-	-
Chill	no	-	-	-	-
0-star or ice-making	no	-	-	-	-
1-star	no	-	-	-	-

2-star	no	-	-	-	-
3-star	no	-	-	-	-
4-star	no	-	-	-	-
2-star section	no	-	-	-	-
Variable temperature compartment	no	-	-	-	-

#### For 4-star compartments

Fast freeze facility	no
----------------------	----

#### Light source parameters <sup>(a)</sup>:

Type of light source	LED
Energy efficiency class	-

<sup>(a)</sup> as determined in accordance with Commission Delegated Regulation (EU) 2019/2015.

Climate class:

- Temperate: ‘this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C’.
- Subtropical: ‘this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C’.

This appliance is intended to be used exclusively for the storage of wine.

This refrigerating appliance is not suitable for freezing foodstuffs.

## DISPOSAL



As a responsible retailer we care about the environment. As such we urge you to follow the correct disposal procedure for the appliance and packaging materials. This will help conserve natural resources and ensure that it is recycled in a manner that protects health and the environment.

You must dispose of this appliance and its packaging according to local laws and regulations. Because this appliance contains electronic components, the appliance and its accessories must be disposed of separately from household waste when the appliance reaches its end of life.

Contact your local authority to learn about disposal and recycling. The appliance should be taken to your local collection point for recycling. Some collection points accept appliance free of charge.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.